


# Duo-Pitch Fixing Kits

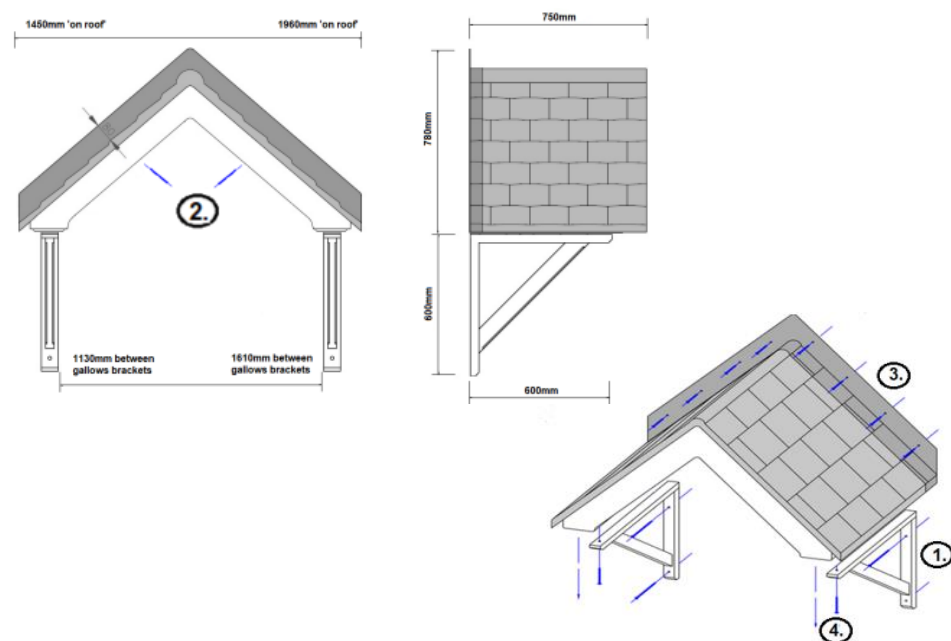

## Supplied Fixings:



- 7.5mm x 100mm Concrete Screws
- 5mm x 50mm Woodscrews
- Grey Screw Caps (Hinged)
- White Screw Caps (Hinged)
- Brown Wall Plugs

## Not Supplied:



- Various drill bit sizes
- Silicone sealant

## Fitting Instruction

Fixings supplied within this pack suitable for solid brickwork and 7kN blockwork. Ensure wall is flat and level **before** fitting the canopy.

- 1 Drill through bracket with 8mm drill bit, and position on wall at correct height, mark, ensure brackets are level and drill through wall with 6mm drill bit. Screw through the bracket into the wall.



- 6mm Drill Bit
- 8mm Drill Bit



- 7.5mm x 100mm Concrete Screws

- 2 Remove Roof from base and position the base on the brackets, Drill through steel plates on rear of the canopy with 6mm drill bit, and screw in concrete screws, with 3mm pilot bit, drill through top of brackets, into the base, and fix with wood screws.



- 3mm Drill Bit
- 6mm Drill Bit



- 5mm x 50mm Wood Screws
- White Screw Caps (Hinged)

- 3 Position roof section on canopy base, using pins and locator holes. Ideally through brick centres, mark, drill and fix through roof upstand (mimics the lead flashing)

**Please Note:** The roof upstand is not pre-drilled.

Apply clear silicone sealant to reverse side of upstand prior to fixing to stop the migration of water.



- 6mm Drill Bit



- 5mm x 50mm woodscrews
- Brown plugs
- Grey screw caps (hinged)

- 4 Apply silicone sealant bead along top of roof upstand

- 5 Clean down canopy if necessary – refer to cleaning and maintenance guide overleaf.